

InstaShiatsu+ Massage Chair MC-2000

Foot Actuator Replacement

Please note: Before attempting to remove the foot actuator, ensure that the chair is unplugged from the power source to prevent any electrical accidents.

1. Remove the foot assembly

- Locate the two screws that secure the foot assembly in place.
- Using an appropriate screwdriver or tool, carefully remove these screws.
- Lift the foot assembly up and out of the hinges, ensuring that it is completely detached from the chair.



2. Disconnect the hoses and harness

- Identify the three hoses and the white harness connected to the footrest.
- Unplug these hoses by carefully pulling them out, and disconnect the white harness from its connection point.
- Take note of the hose and harness locations for future reference.



3. Remove the screws

- Locate the four screws that secure the upper portion of the cosmetic cover behind the foot assembly.
- Using the appropriate screwdriver or tool, carefully remove these screws, setting them aside for later use if needed.



4. Remove screws around connectors

- Identify the screws that are securing the hose connectors for the foot assembly.
- Remove these screws using the appropriate screwdriver or tool.




5. Remove the hoses and release harness tabs

- Carefully disconnect the hoses.
- Locate the two black tabs holding the harness in place and release them.
- Once released, gently remove the harness from its position.




6. Pinch and remove the harness

- Pinch the sides of the harness and push inwards to release it from its connectors.
- Ensure that all connectors are disconnected before proceeding.

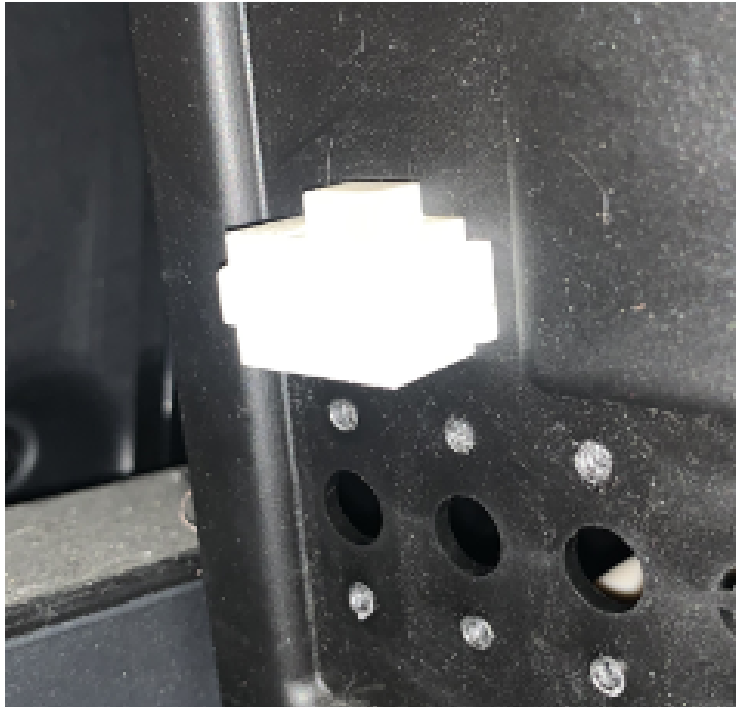

7. Remove the black cover

- Lift the black cover until a small plastic piece reaches the "T" position.
- Once in the "T" position, carefully pull the top cover off to remove it.

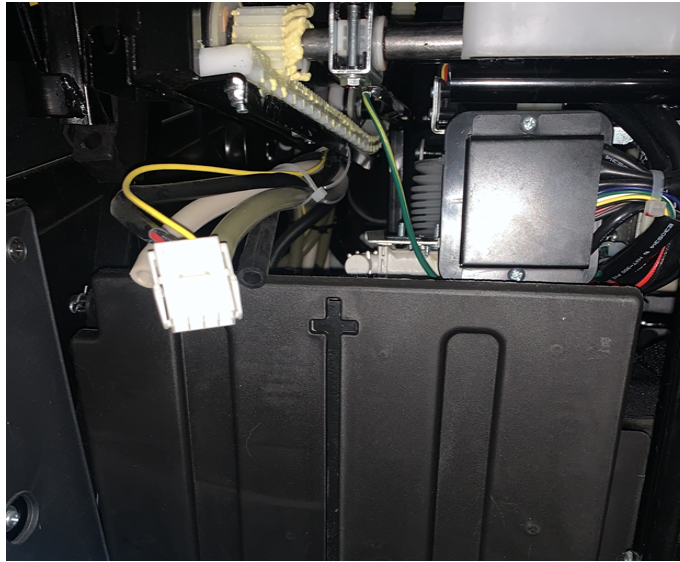


8. Disconnect the connected arm

- Pull out the pin shown below.
- Carefully remove the connected arm from its position.



9. Remove the Velcro and plastic cover

- Locate the Velcro behind the black plastic cover.
- Remove the Velcro, ensuring that it is completely detached.
- Lift the black plastic cover to remove it.

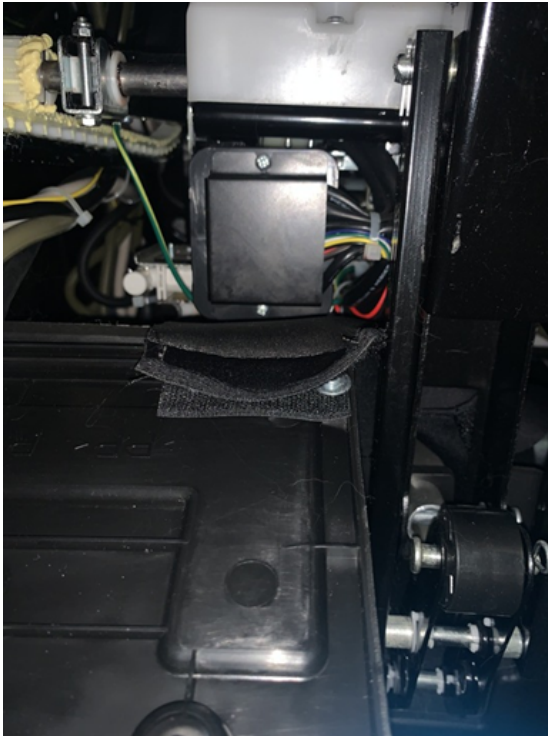

10. Remove the bottom plastic cover

- Pull hard upwards on the top of the bottom plastic cover to detach it from the base of the chair.




11. Cut the zip ties and unplug the harness

- Locate any zip ties securing the harness in place and cut them using scissors or wire cutters.
- Unplug the harness connectors from their corresponding ports.



12. Remove the pin

- Locate and remove the pin that secures the foot actuator in place.

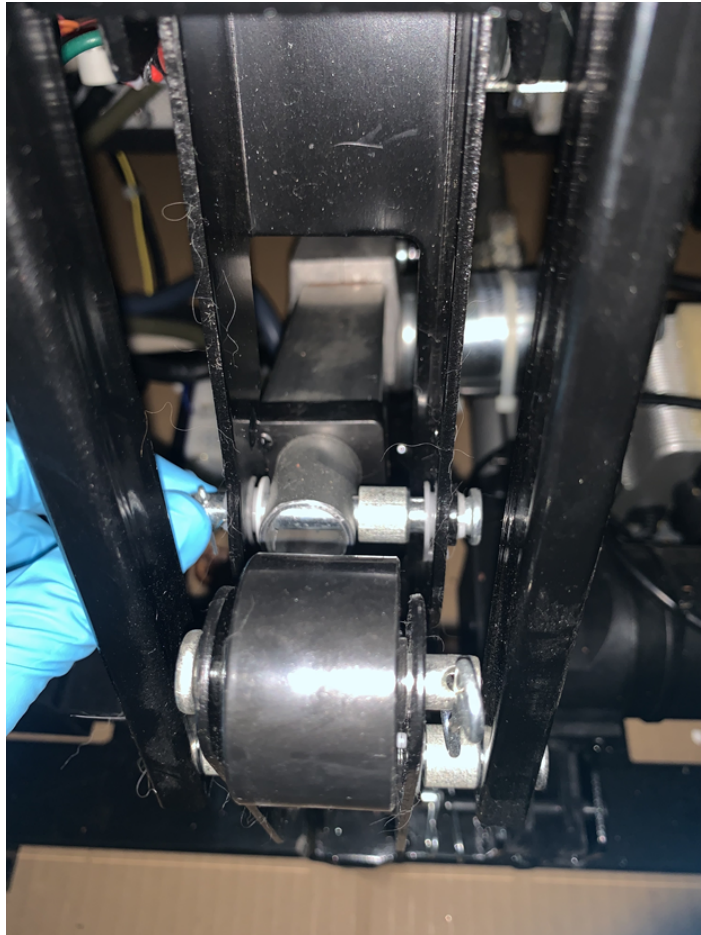

13. Remove the pin on the back

- Identify the pin on the back of the foot actuator and remove it.



By following these steps, you should be able to successfully remove the foot actuator from the MC-2000. Remember to exercise caution and work patiently to avoid any damage to the chair or injury to yourself.

To install the replacement foot actuator, please follow the instructions provided in reverse order.