

Coda Massage Chair

Arm Disassembly & Reassembly

To disassemble the Coda massage chair arm, follow these steps:


1. Back Panel:

- Locate the back panel of the chair arm.
- Remove the 8 screws securing the back panel using an appropriate screwdriver.
- Set the screws aside for reassembly.

2. Arm Allen Bolts:

- Find the arm allen bolts on both sides of the arm.
- Use an Allen wrench to unscrew and remove both the lower and upper bolts.
- Keep the bolts in a safe place for later use.



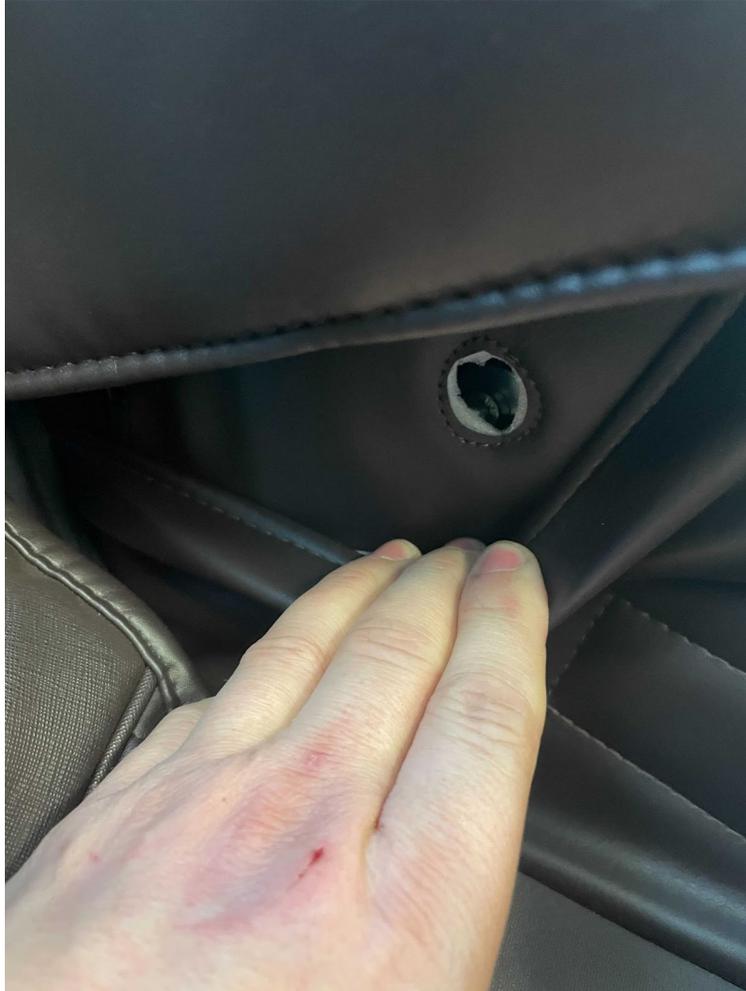

3. Air Hoses and Harnesses:

- Identify the air hoses and harnesses connected to the arm.
- Remove the 3 air hoses by gently pulling them off the connectors.
- Note the location of the right and left sides for future reference.
- Disconnect both harnesses by unplugging them from their respective connectors.
- Take pictures or make notes of the connections to assist during reassembly.





4. Motherboard Cover:

- Locate the motherboard cover on the arm.
- Unscrew the 3 screws holding the cover in place.
- Slide the motherboard cover off and set it aside.

5. Harnesses and Zip Ties:

- Locate the harness connected to the motherboard.
- Unplug the harness and cut the black zip tie securing it.
- Identify the 4 connectors and remove them, along with the grounding strap.
- Cut the zip tie that secures the connectors and strap.
- Look for any additional zip ties or clamps and remove them as necessary.

6. Daughterboard and Power Inverter:

- Unplug the 3 harnesses connected to the daughterboard.
- Cut any zip ties securing the harnesses to the motherboard.
- Remove the 8 screws holding the daughterboard and power inverter in place.
- Set aside the daughterboard and power inverter for reassembly.

7. Chassis:

- Locate the 4 screws on the top and side of the chassis.
- Unscrew and remove these 4 screws to release the chassis.
- Lift up the foot assembly to access the bottom of the arm.

8. Black Cover:

- Locate the black cover that exposes the allen bolt inside the rectangular prism.
- Remove the 4 screws securing the black cover.
- Once the screws are removed, carefully remove the black cover to reveal the allen bolt inside.

You have now successfully disassembled the Coda massage chair arm. To reassemble, follow the steps in reverse order, ensuring all components are securely attached and all connections are properly plugged in. Use the pictures and notes you took during disassembly to assist with the reassembly process.