

888-264-1766 x203
www.trumedic.com
hr@trucoredistributors.com
payroll@trucoredistributors.com

# **Coda Massage Chair**

## Foot Disassembly & Reassembly

Disassembling the truMedic Coda Massage Chair Foot Assembly:

## 1. Preparation:

- Ensure the massage chair is turned off and unplugged from the power source.
- Find a clear and spacious area to work, allowing easy movement and access to the chair.

## 2. Locate the foot assembly:

- Examine the massage chair to identify the foot assembly. It is usually located at the bottom of the chair and consists of two footrests.

## 3. Remove any obstacles:

- Clear the area around the foot assembly of any objects or debris that might hinder the disassembly process.

## 4. Unfasten slider pins:

- Look for the slider pins securing the foot assembly to the chair frame.
- Slide foot assembly off pulling to one side then the other.



888-264-1766 x203 www.trumedic.com hr@trucoredistributors.com payroll@trucoredistributors.com






888-264-1766 x203 www.trumedic.com hr@trucoredistributors.com payroll@trucoredistributors.com


## 5. Disconnect electrical connections:

- If there are any electrical connections between the foot assembly and the chair's main body, locate them.
- Gently unplug and detach any electrical connectors or cables, taking care not to damage them.

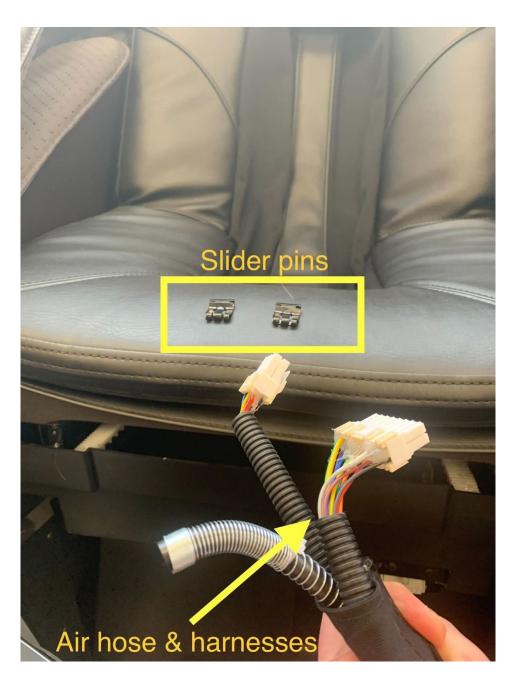



888-264-1766 x203 <u>www.trumedic.com</u> <u>hr@trucoredistributors.com</u> <u>payroll@trucoredistributors.com</u>

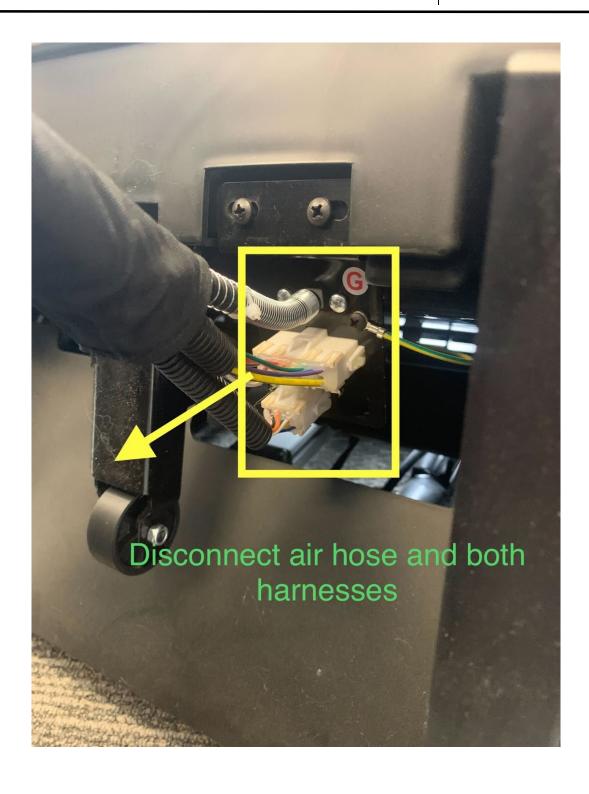



888-264-1766 x203
www.trumedic.com
hr@trucoredistributors.com
payroll@trucoredistributors.com

## 6. Detach the foot assembly:

- With all screws and electrical connections removed, carefully lift the foot assembly away from the chair frame.
- Pay attention to any remaining attachments or mechanisms that may still be connected. Disconnect them as necessary.

The foot assembly is now disassembled. To reassemble it, follow these steps:

## 1. Position the foot assembly:

- Place the disassembled foot assembly in the appropriate position on the chair frame.
- Ensure all screw holes and attachment points align correctly.

#### 2. Reconnect electrical connections:

- If any electrical connectors or cables were detached during disassembly, reattach them to their respective counterparts.
  - Ensure a secure connection is established, avoiding any loose or exposed wiring.

## 3. Secure the foot assembly:

- Begin fastening the sliders back into their original positions.
- Reattach the foot assembly by sliding one side in and then the other.

## 4. Final check:

- Inspect the foot assembly and its connections to ensure everything is properly assembled.
- Confirm that the footrests move smoothly and securely, without any obstructions or loose components.

Remember, these instructions are a general guideline, and the truMedic Coda Massage Chair may have specific requirements or variations. If you encounter any difficulties or uncertainties during the disassembly or reassembly process, it is highly recommended to consult the manufacturer's manual or contact their customer support for assistance.