

Coda Massage Chair


Back Actuator Replacement

Please note that disassembling and reassembling any complex equipment requires caution, and it's recommended to refer to the manufacturer's instructions or seek professional assistance if you're unsure.

To change the back actuator in a Coda massage chair, follow these improved instructions:


1. Remove Back Cover and Screws:

- Locate the back cover of the massage chair and identify the two screws circled below.
- Use an appropriate screwdriver to remove the screws and set them aside for later use.
- Carefully detach the back cover and set it aside.

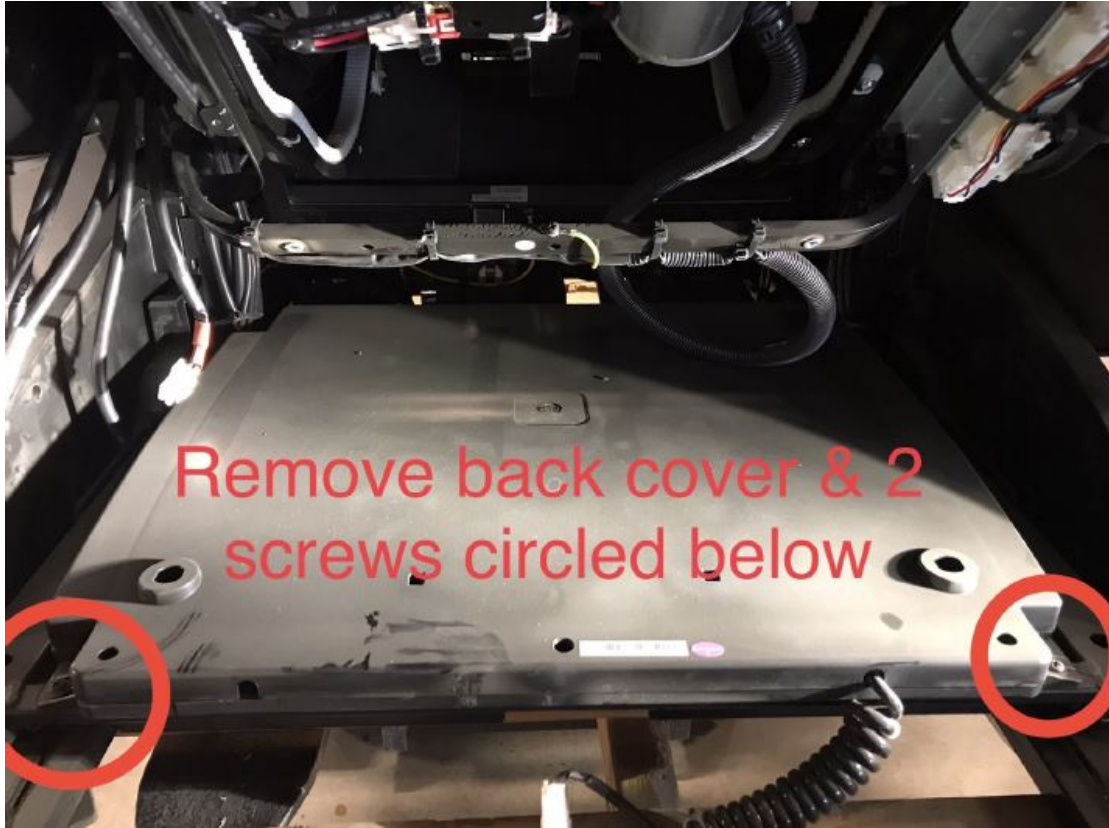

2. Remove Pin:


- Locate the pin that secures the back actuator in place.
- Using an adjustable wrench, carefully loosen and remove the pin.
- Keep the pin in a safe place for reassembly.

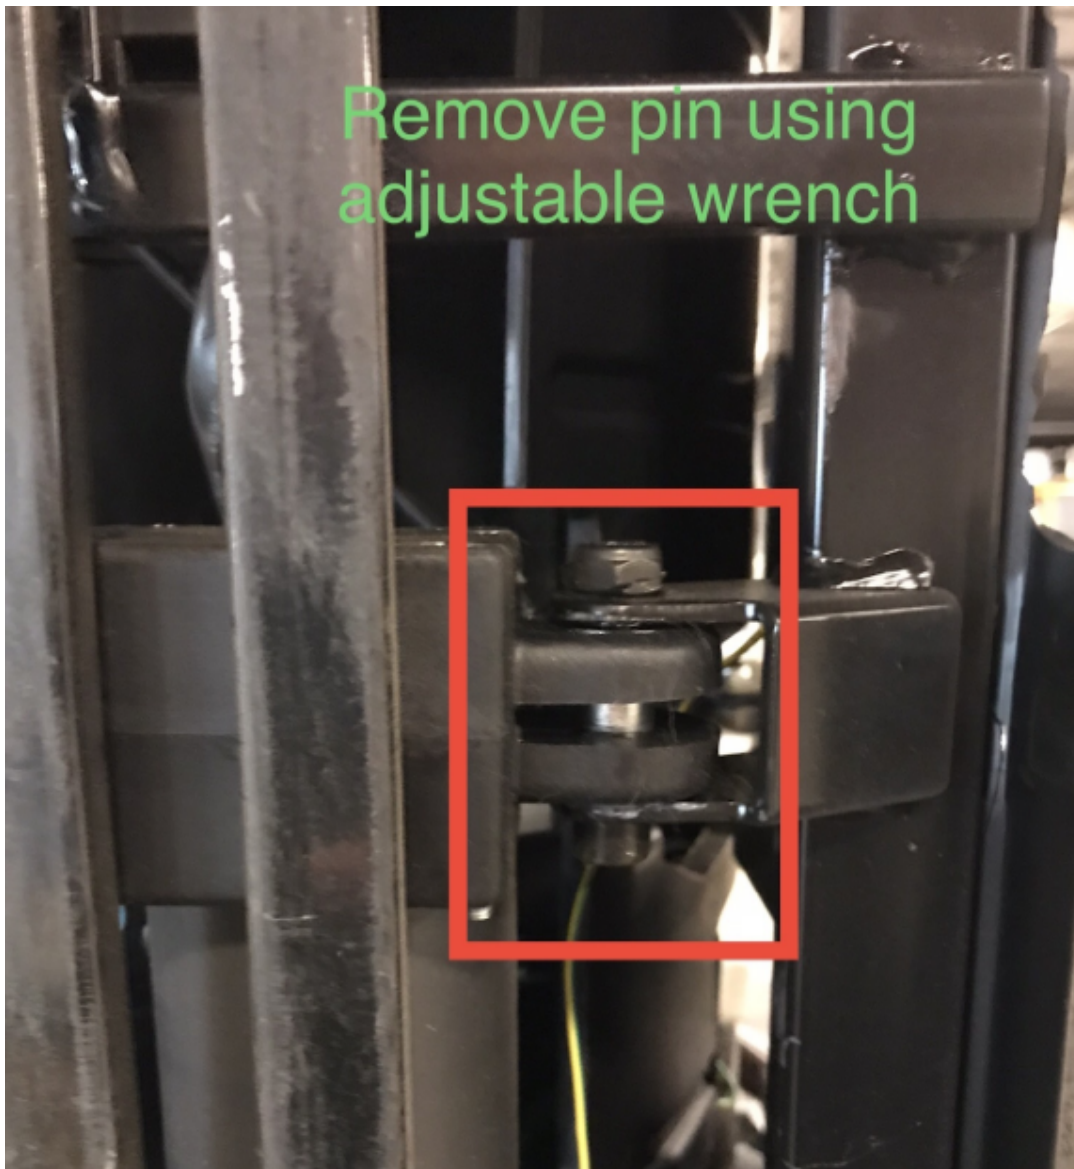




3. Position the Coda Massage Chair:


- Gently lay the Coda massage chair on its side, ensuring stability and support.
- This position will allow you to locate and access the back actuator more easily.

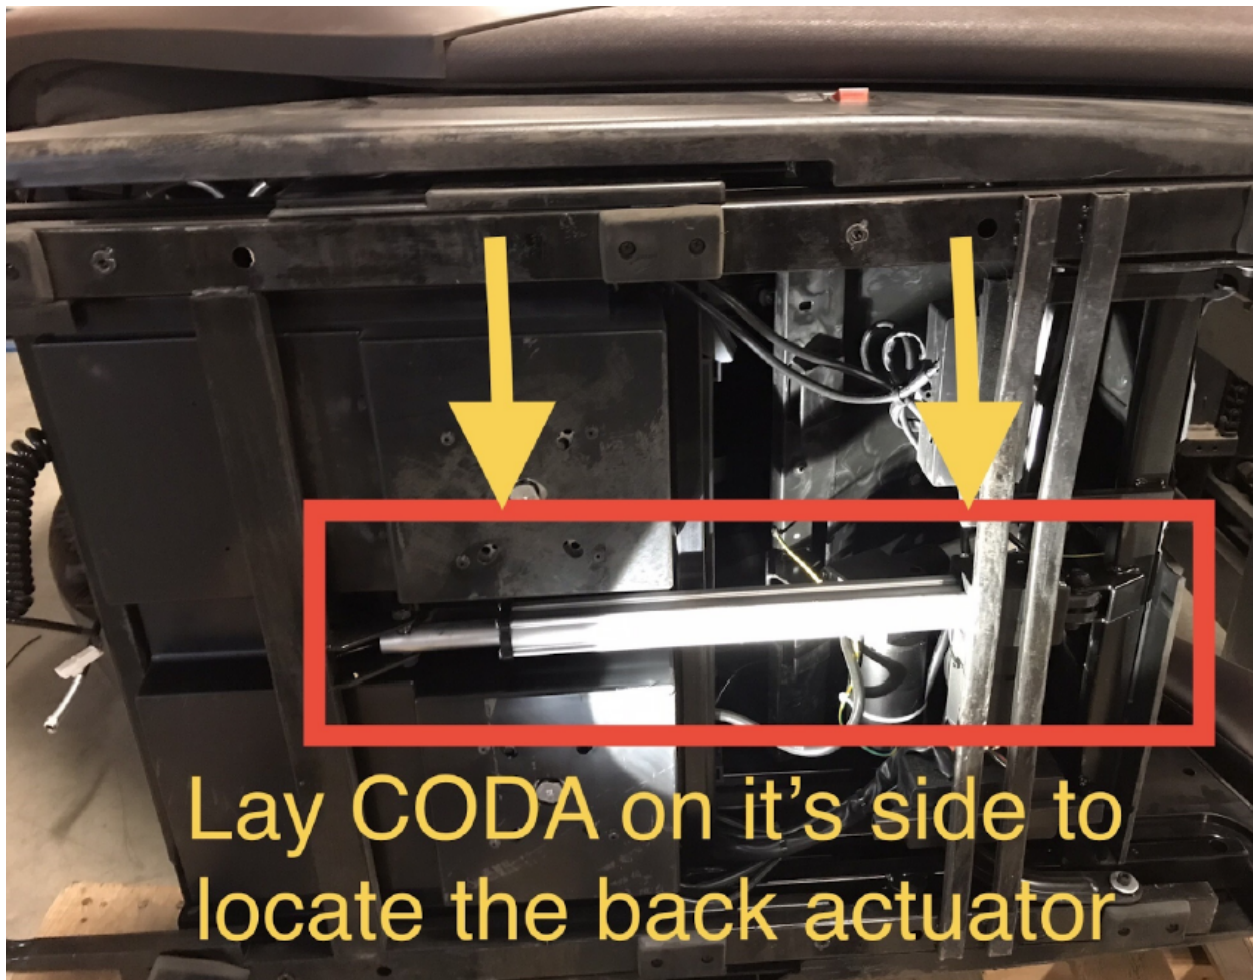

4. Disconnect White Harness:

- Locate the white harness connected to the back actuator.
- Disconnect the white harness by gently unplugging it from the actuator.
- Take care not to force the connection and avoid damaging the wires or connectors.

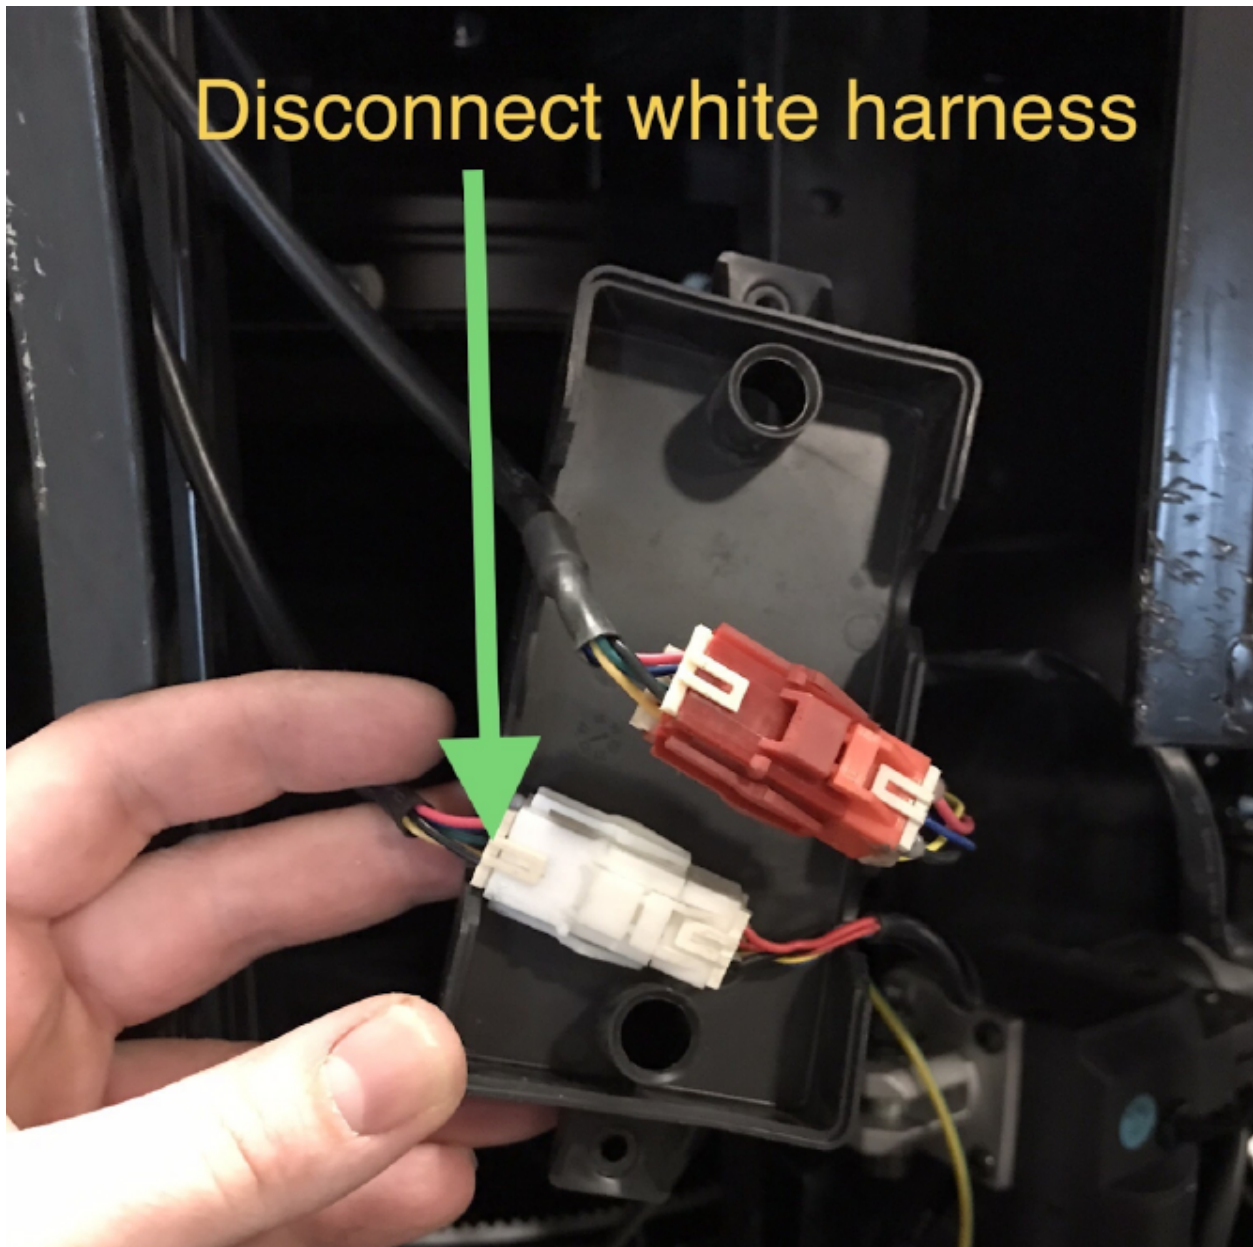

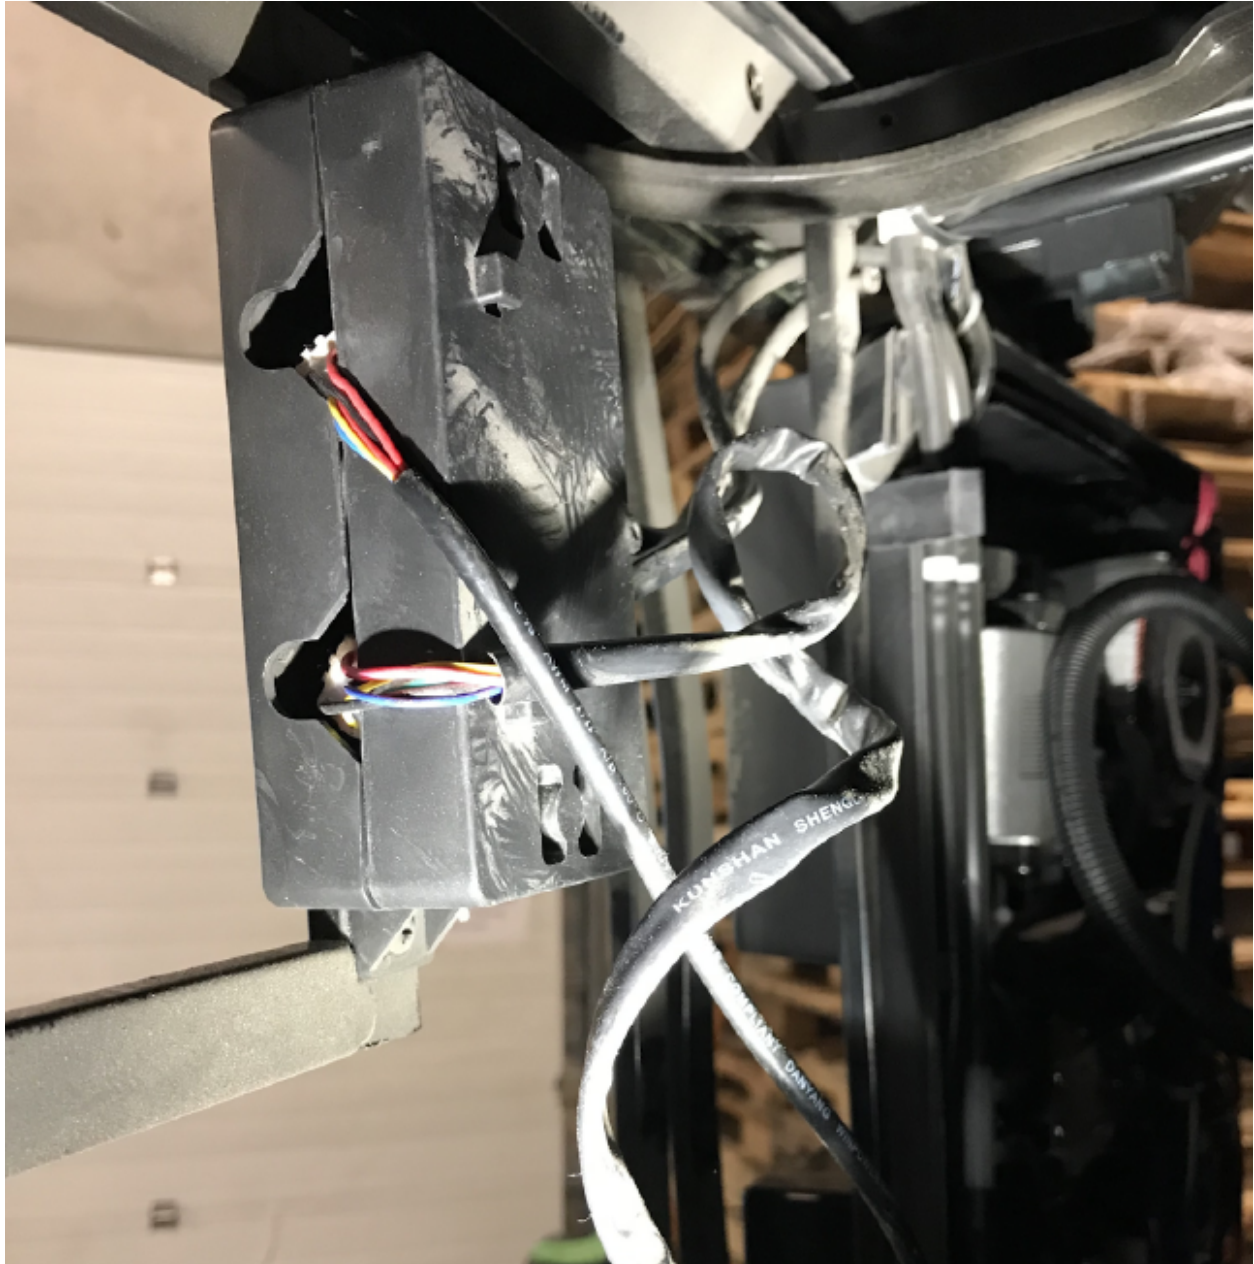


5. Remove Cover for Wiring Harness:

- Identify the cover that provides access to the wiring harness of the back actuator.
- Remove the cover by unscrewing any screws or releasing any clips or fasteners securing it.

- Set aside the cover for reassembly.

6. Slide Out the Actuator:

- After gaining access to the wiring harness, carefully slide out the back actuator from its position.
- Make sure to support the actuator while removing it to prevent any accidental damage.
- Pay attention to any connectors or attachments that may still be connected, and disconnect them if necessary.

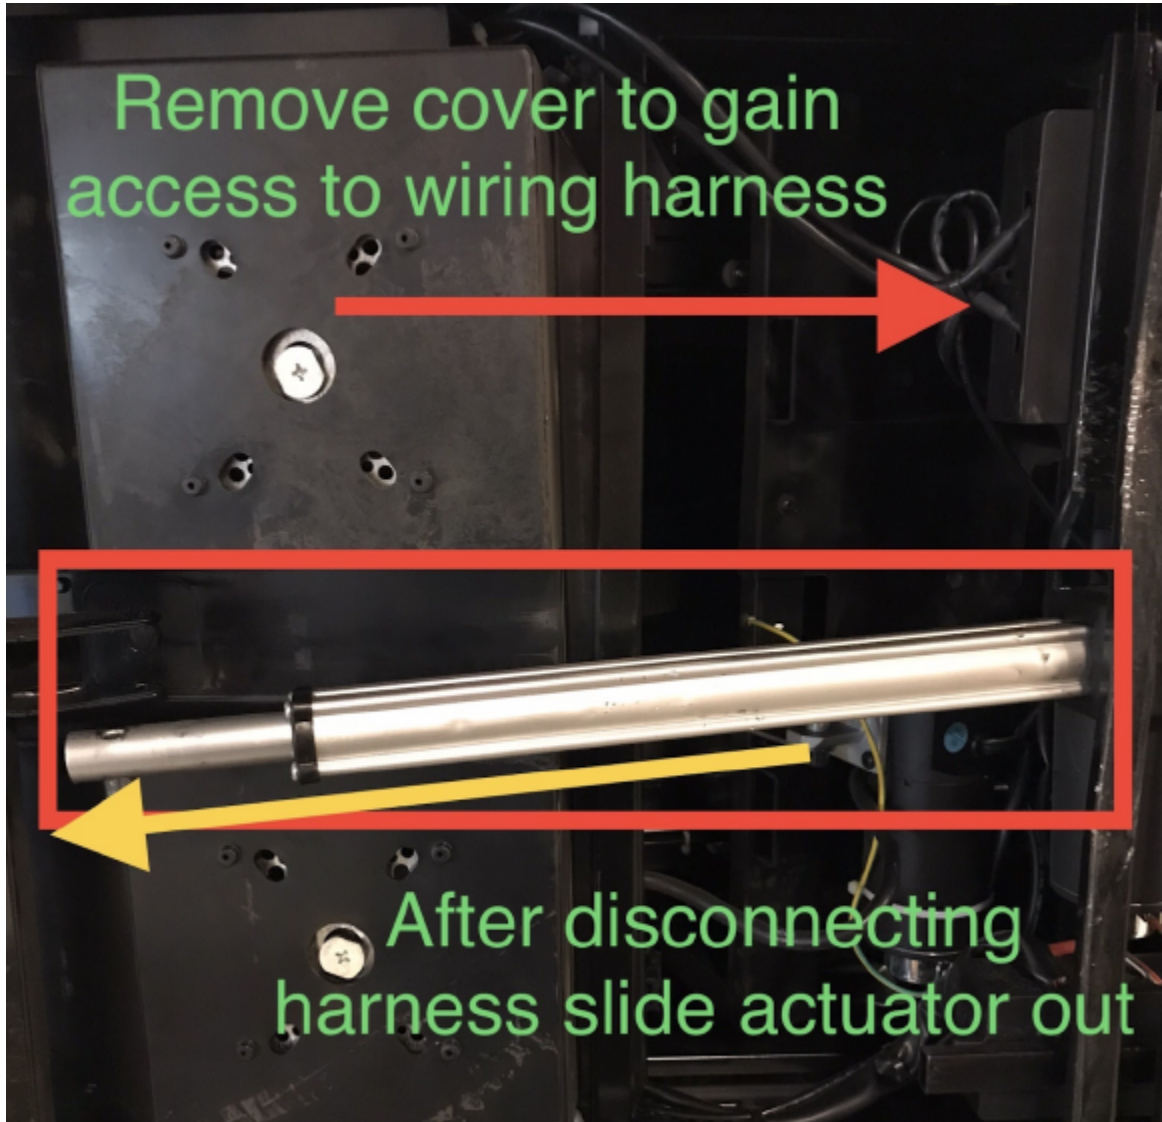

You have successfully completed the steps for changing the back actuator in a Coda massage chair. To install the new actuator, follow the steps in reverse order, ensuring all connections are securely plugged in, covers are properly reattached, and the chair is positioned upright. If needed, refer to any manufacturer's instructions or diagrams specific to your Coda massage chair model.